






# Auto-plate error


## **How to clear an auto-plate error**


If the auto-plate error red light  is flashing this represents an error. Press special function  and 56, now in the display 01-05 this is printing unit 1 plate error if the display 02-05 this is printing unit 2 plate error. To clear this error you must open the lead edge clamp of the printing unit that has the error. (See below *How to manually eject a plate*)

## **How to manually eject a plate**

Rotate by hand crank clockwise until tail clamp is in upper position. Use the 5mm T-handle to open the tail clamp by putting the end in a hole in the middle of the tail clamp and rocking the clamp open. Remove the tail of the plate from the clamp. Hold the tail of the plate and rotate by hand crank counterclockwise until the lead edge of the plate comes around. Make sure the Printing unit selection button  is selected to the correct unit you are ejecting. Observe the operator side of the plate cylinder to see the lead clamp lever cam follower is under the piston lever and the auto-plate load button  is flashing quickly. Press the auto-plate load button  this opens the lead edge clamp. Remove the plate.

## **Troubleshooting**

If the auto-plate load button  doesn't blink in the desired position. Check that the emergency stop is not activated. Check that the only guard's that are open are the auto-plate top guard and the side door for the hand crank.

If all of these measures are taken and the auto-plate load button  doesn't blink contact your local dealer or Baumfolder for help. You may have an encoder or electrical fault.

\*\* End of document \*\*