


BAUMFOLDER

Model 2020 Splitguide Installation

Overall Top view showing both marbleholders mounted to the 8-page right angle folder.




To install the transfer table and ejector roller, mount the assembly in the exit end of the parallel folder section using the posts that the hangon delivery stacker mount onto. In and out adjustments are provided for repeat installation using the adjustment screws. The brass-tipped locking knob at each end is used to secure in place.

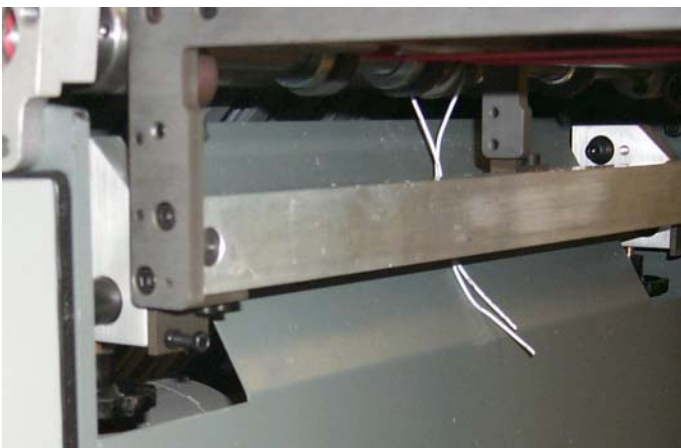

The transfer table is driven by friction using a collar that mounts on the lower slittershaft to drive the adjoining drive roller on the transfer table. This is located at both ends of the assembly to provide drive.





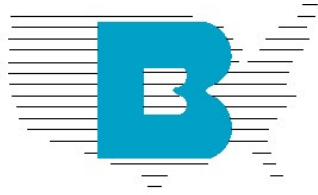

BAUMFOLDER



Install pullout wheels on ejector roller and transfer table to guide sheet into respective marbleholders. Note holddown assembly for crosscarrier.

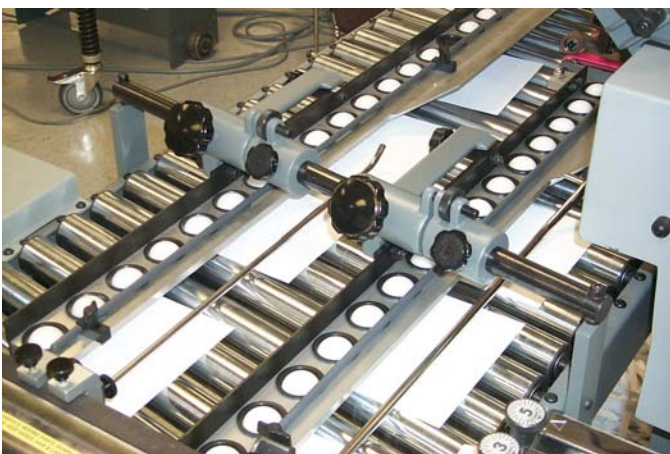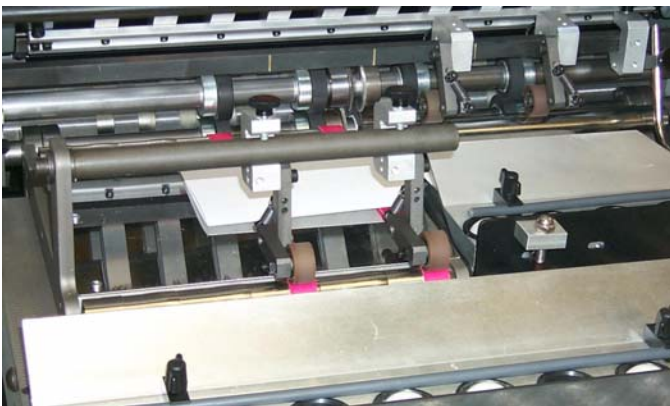

Remove existing marbleholder upper support and install shorter marbleholder assembly onto same bar. A lower square support bar must be mounted between two of the crosscarrier rollers using the existing holes found in the frames. This bar enables proper support of the end of the shorter marbleholder.



BAUMFOLDER



Install the (4) splitstops. Install (2) splitstops onto (2) different foldplates. We recommend installation on #1 and #2 foldplates. This gives you flexibility to move plates from position to position to perform a letterfold at least (3) different ways.

Additional Notes:

A second set of delivery stacker wheels is provided with the splitguide kit to control the second stream of paper.

